

This document provides installation steps for racking, cabling, and setting up the Nexsan UNITY U2G478 Storage Expansion System, and cabling all Nexsan storage components for power and data/host connectivity. For additional documentation, please visit <https://www.nexsan.com/support/>


Taking delivery

Your Unity shipment includes the U2G478 Storage Expansion System, and other Nexsan storage systems or hardware, depending on your configuration. Check to ensure no damage has been sustained to the packaging in transit. If anything appears damaged, you should file a claim with your reseller.

Hardware overview

The main components of the U2G478 are shown in the following front and rear view diagrams:

Front view

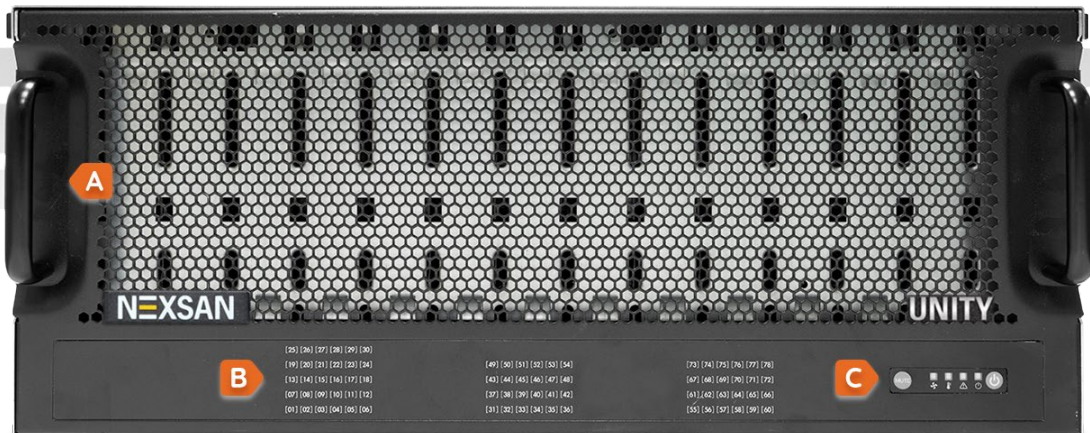


Rear view



Item	Name	Description
A	Tray handles (2)	For secure insertion and removal of entire unit to and from rack.
B	Disk slot ranges and numbers	Total physical storage capacity of 78 x 3.5" HDD bays.
C	Front panel	Power and Mute buttons. Power, Fail, Temperature, & Fan LEDs. See page 5 for function and indication descriptions.
D	Expander panel (host connectivity)	Single/dual expander(s), 1 IPMI port and 4 x mini SAS HD ports. See page 5 for description.
E	Power supply units (2)	AC 1600W 1+1 redundant 80 + Platinum/Titanium. 200V~240V AC input.
F	Fan assemblies	8 x 6056 hot swap fans.

1 Prepare for installation

- A Carefully read safety notices on [page 6](#).
- B Ensure ahead of time that you have a suitable rack; see [Rack and enclosure specifications on page 6](#).
- C Ensure that you have a Phillips screwdriver.
- D Have someone assist you during installation.

 **CAUTION:** Acclimate new disk drives to room temperature for two hours before you install them.

2 Unpack the UNITY U2G478


- A Remove all the components from the packaging. Reach under the chassis to pull it free from the foam insert. Do NOT lift the UNITY U2G478 chassis from its packaging using the controller handles or the attached rails.

- B Place the components on an anti-static surface until you are ready to use them.

UNITY UG2478 package contents

- One Unity Storage Expansion System
 - 2 outer-rack rail assemblies (inner-chassis rails are already installed)
 - 4 mounting screws with 4 washers to attach outer-rack rails to the rack (1 on the front and 1 on the back for both the left and right rail assemblies)
 - 2 long screws to secure the chassis to the rack from the front (attached to the chassis)
- Up to seventy-eight SAS HDD or SAS SSD drives (check that the components included in your shipment correspond to your packing slip)
- Four SAS cables, HD Mini SAS to HD Mini SAS (may be optional, check shipment components and packing slip)
- Two power cords
- One electrostatic discharge (ESD) wrist strap


3 Rack the UNITY U2G478

 **CAUTION:** Physical installation requires two people.

Example rack positions for components:


- UNITY NV10000 on top, Unity Storage Expansion below

Example of UNITY NV10000 with U2G478

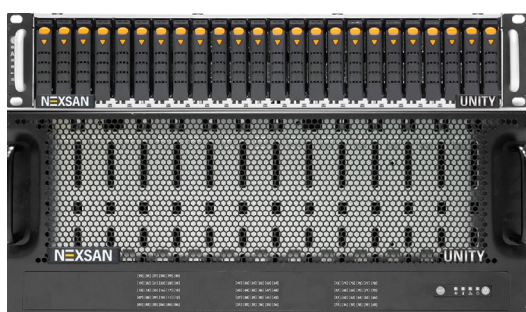


► Step 1: Attach the slide rail bracket assembly to the rack frame


- A Align and attach the front rail bracket to the rack.

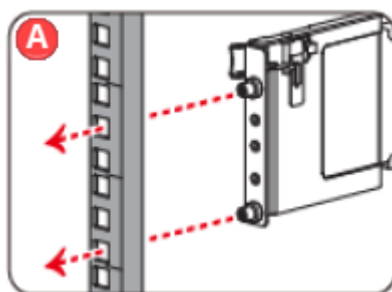


- B Ensure that the latch on the rail is hooked into the rack.

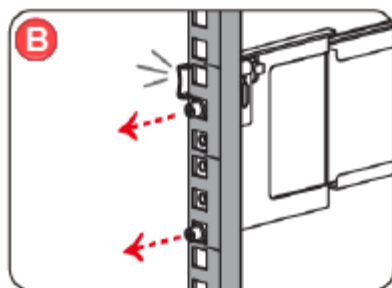


- C Align and attach the rear rail bracket to the rack by pushing the latch outward.

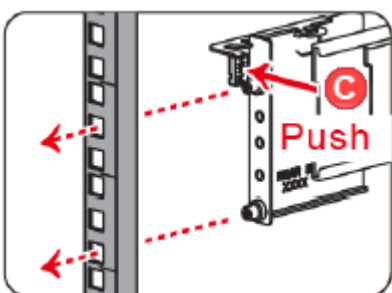


- D Ensure the latch is hooked onto the rack.

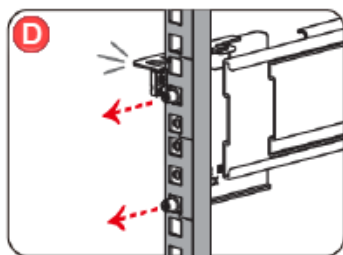

- E Secure the rail bracket with washer & screw, on both sides of the rail bracket, front & back.

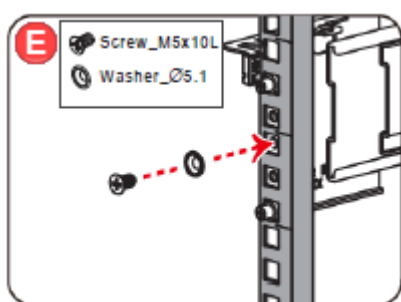


F Repeat steps A-E to install the other side of the rack.

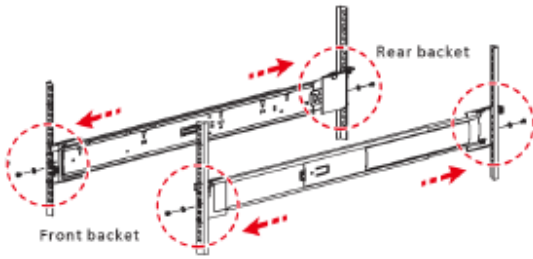


Step 2: Attach the UNITY U2G478 on to the rack frame


A Pull the inner and middle rail to fully locked position.

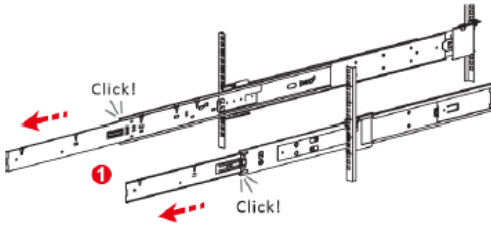


B Position the chassis vertically into the rail. Ensure the standoffs on the chassis slide into the v slots on the rail bracket.

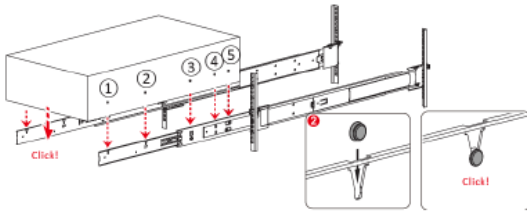

C Secure the chassis to the rail with screws.

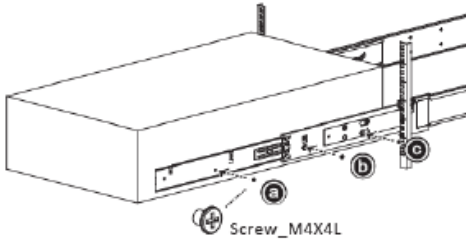

D Push the release tab on the inner rail and push the chassis into the frame.

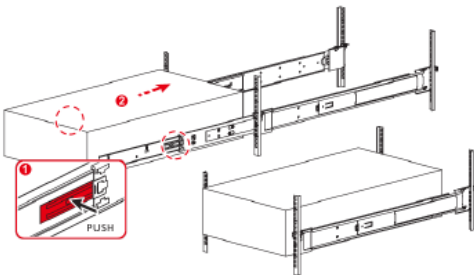


Step 3: Install SAS HDD or SAS SSD drives

CAUTION: Put on the ESD wrist strap before starting:

- Slip the wrist loop over your hand (left or right), then tighten the loop against your wrist.
- Attach the clip end of the anti-static wrist strap to a properly grounded metal surface.

To install the disks in the drive trays:


- A Match the dimples on the HDD with the tool-less tray.
- B Align the HDD with the tray by placing it against each other.
- C Insert the HDD into the tool-less tray in the suggested order 1 – 4 below. Make certain to attach the side of the tray with the larger dimples to the HDD first and the side with the smaller dimples last for easier installation.

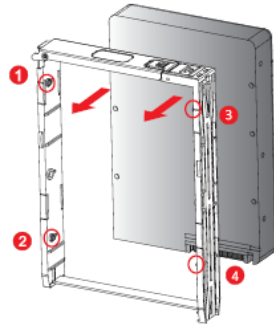

To install the drive trays into the chassis:

Ensure the front, middle, and rear top section covers of the unit are removed.

- A Insert the drive tray into chassis drive cage bay. Correctly secure the drive tray in place when its front edge aligns with the bay edge.
- B Push the tray lever until it reaches the end and clicks.

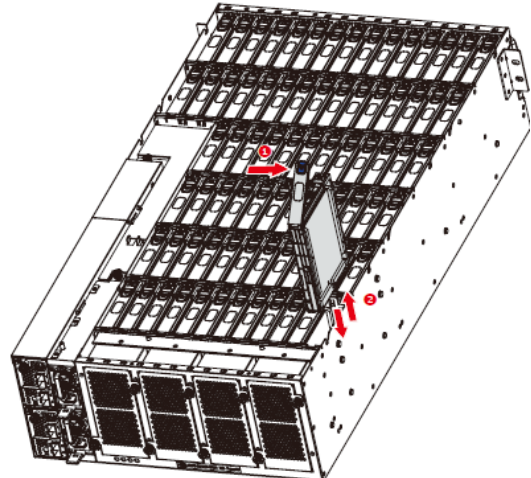

CAUTION: If the U2G478 is not fully populated, to ensure proper airflow you **MUST** install drive blanks to complete the last incomplete row of drives, **AND** if applicable, install drive blanks in the row immediately following the last populated row.

4 Install the Unity Storage System

Unpack and install any Unity Storage System included in your Unity shipment.

For detailed instructions, refer to the appropriate *Nexsan Unity Quick Start Guide* included in the Unity packaging, or visit:

<https://www.nexsan.com/support/>.

5 Connect to a Unity Storage System

This section describes the steps for connecting U2G478 expansion(s) to a Unity Storage System.

► Step 1: Cross-connect the storage expansion to the storage system

A Cross-connect from the Add-on HBA SAS OUT ports on the Unity Storage System to the HBA SAS IN ports on the first U2G478, as shown in UNTY10000 connected to U2G478 Expansions in the diagram just below.

B Connect any additional storage expansions using the daisy chain method, also as shown.

You can cascade other types of Nexsan storage expansions with the U2G478, but the U2G478 units must be connected last in the series. For details about connections and about cascading to more Unity Storage Expansions, please see the *Nexsan Unity Storage Expansion Reference Guide*.

CAUTION: Do not connect to the Unity Storage Expansion from the lower, onboard SAS ports on the UNITY U2G478. Use SAS cables that can extend the length of the U2G478 when the drawer is pulled open. Use two-meter cables or longer to direct connect from the Unity Storage System to a second U2G478 Storage Expansion.

The Unity Storage System is hot pluggable: Once in service, powering down is not normally required to add a Unity Storage Expansion.

► Step 2: Connect the power cables


A Plug the power cords into their respective power supplies on the rear of the U2G478.

B Plug the power cords connected to the power supply units into a high-quality strip that offers protection from electrical noise & pwr surges.

CAUTION: Use only the power cords supplied with the U2G478. Do not use another type of cord or extension cords. If you require additional power cords, please contact your Nexsan sales representative or reseller.

NOTE: We strongly recommend that you use an Uninterruptible Power Supply (UPS).


UNITY NV10000 connected to U2G478(x2)

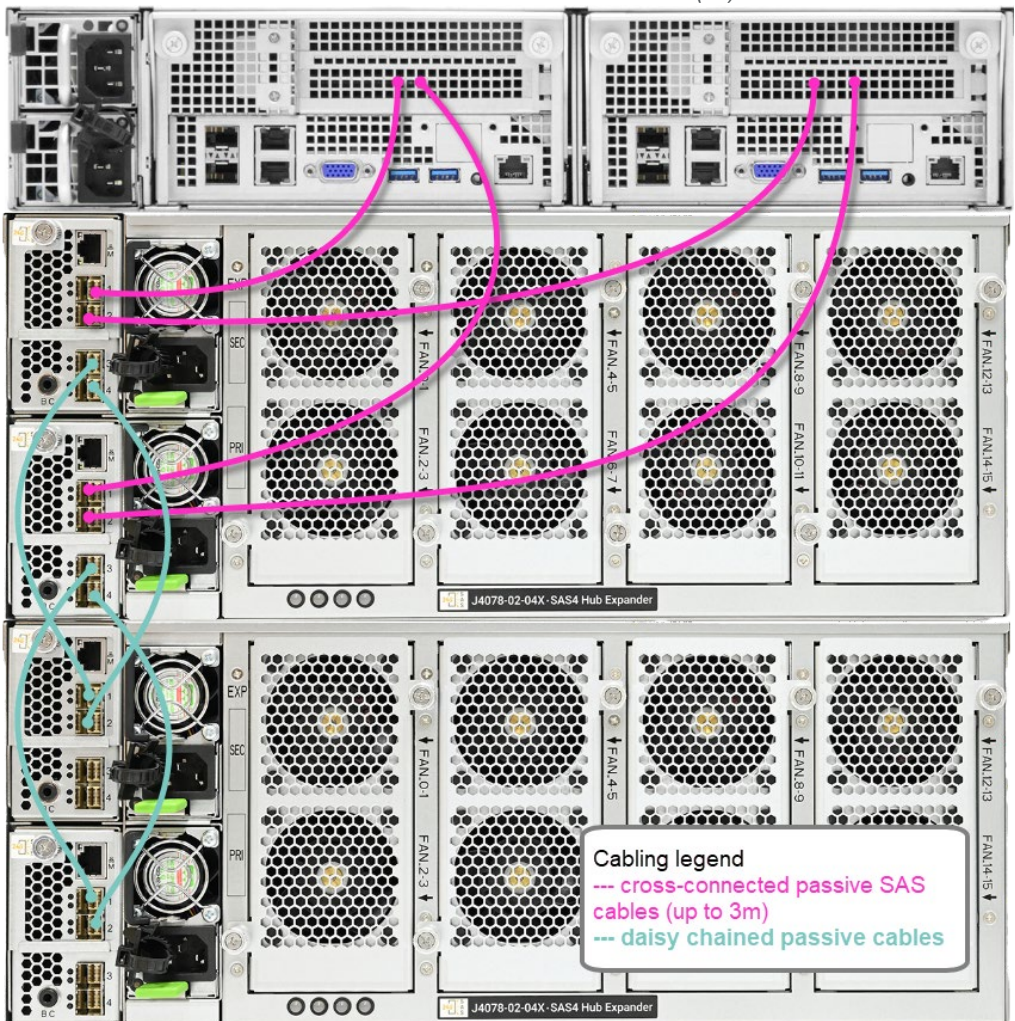

6 Power on Unity components


Power on the Unity components for the first time in the sequence as described in this section.

► Step 1: Power on your Unity Storage Expansion

Press and hold the power button located on the right front panel of the chassis until the power LED lights up. 

NOTE: If you are adding multiple Unity Storage Expansions, power them on from last to first.

► Step 2: Power on Unity Storage System


- Press and hold the power button located on the left front panel of the chassis until the power LED lights up. 
- Verify that the power LEDs on the front control panel are illuminated to ensure that the controller nodes are receiving power and the power modules are functioning properly.
- Verify that the drive carriers LEDs are illuminated in green.

7 Monitor the Unity Storage Expansion

This section describes the front panel LEDs that help you to monitor the Nexsan Unity Storage Expansion.

Control panel LEDs

The control panel located on the front right side of the U2G478 has buttons and LEDs. The functions and indicators provide critical information related to the system, as per the diagram and associated annotations below.

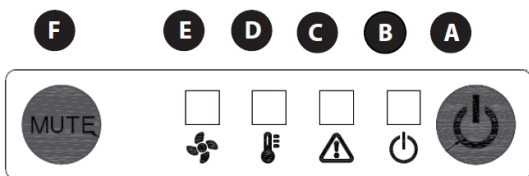

A

System Power	
Behavior	Status
Normal	Off
Press	Boot up
Long Press	System shut down

B

Power LED	
Behavior	Status
On	Blue
Off	No status

C

Power Fail LED	
Behavior	Status
Normal	Off
Failed	Red

D

Temperature (Overheating) LED	
Behavior	Status
Normal	Off
Failed	Red

E

Fan Fault LED	
Behavior	Status
Normal	Off
Failed	Red

F

System Alert Mute Switch	
Behavior	Status
Normal	Off
Press	Alert mute


Drive carrier LEDs

Each drive carrier has two LEDs. If a drive fails, replace the drive as described in the *Nexsan Unity Storage Expansion Reference Guide* at www.nexsan.com/ (see Support > Unity > Documents & Downloads).

LED	Indication
Green	<ul style="list-style-type: none"> A steady green LED indicates the drive is powered on. If this LED is not lit, the drive is not getting power. If this LED is flashing, the drive is being accessed (read or write).
Red	<ul style="list-style-type: none"> A steady red LED indicates a drive failure.

Rear expander panel

The U2G478 offers single/dual expander(s) with 1 IPMI port and 4 mini HD ports per expander module.

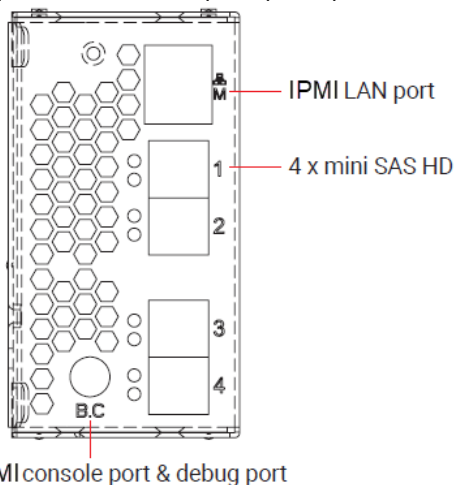



Safety notices

- This equipment must be installed and operated in compliance with local laws and regulations.
- Ensure that the ambient temperature at the installation is between 5°C (41°F) and 30°C (86°F). If the temperature at the site is not actively regulated, ensure that daily and seasonal temperature changes will not result in the ambient temperature going outside these limits.
- Always fully stabilize racks with wall anchors or stabilizing legs, or both, before mounting Nexsan storage enclosures on the rack.
- Situate the rack so that full air flow at both the front and the rear of Nexsan storage enclosures is possible.
- Ensure that the floor beneath the mounting rack has enough load-bearing capacity to support the rack and all mounted components.
- Always fully secure all rack-mounting hardware when installing Nexsan storage enclosures in a rack. Insufficient rack-mount support may allow the unit to fall onto other rack-mounted hardware or onto the floor, potentially damaging equipment or causing injury to nearby personnel.

Specifications

Rack and enclosure

- 4U enclosure height
- The rack must have square holes
- Maximum distances: 30" (800 mm)

Physical specs

- Height: 7.0" 176 mm
- Width: 17.0" 434 mm
- Depth: 38.4" 975 mm
- Weight: 127 lbs 57.7 kg (no drives installed)

Power requirements

- 1600W 1+1 hot swap redundant power supply 80+ Platinum/Titanium
- Platinum, AC Input: 200-240V, 12A, 50-60Hz DC Output: 1600W
- Titanium, AC Input: 200-240V, 10A, 50-60Hz DC Output: 1600W
- Power consumption varies depending on the number and size of drives, running fans, and room temperature.

NEXSAN

Part number: P0450190. Rev: 01.25 . Release Date: Jan. 2025
Related Documentation: Nexsan Unity Hardware Maintenance Guide, Nexsan Unity Software User Guide, Nexsan Unity Help, Nexsan Unity nxadmin CLI Reference Guide.

Technical Support

By Email: support@nexsan.com
By Web: <https://www.nexsan.com/support/>

Copyright © 2010-2025 Nexsan Technologies, Inc. All Rights Reserved. Nexsan®, UNITY NV10000™, U2G478™, and the Nexsan logo are trademarks or registered trademarks of Nexsan. All other trademarks and registered trademarks are the property of their respective owners.

Nexsan 1287 Anvilwood Avenue., Sunnyvale, CA 94089 USA | www.nexsan.com